

2, 3, 4 and 5 are for remote buttons
10, 11, 12 and 13 are for case buttons

